


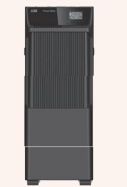


ONLINE UPS

Model	Part number	VA/Watts	Input	Outlet	Railkit required for rackmounting UPS	Railkit required for rackmounting EBM	EBM	Comms	Bypass switch	Applications
PowerValue Rack / Tower 1 - 3KVA										
	PV11-1KBAU-RT	1000/1000		8 x 	PV11-1/2/3-RT-RAILKIT	PV11-1/2/3-RT-RAILKIT	PV11-2KBAU-RT-EBM (max 9)	One slot for any of the below: PV-RELAY-CARD AS400 relay card PowerValue PV-WEBPRO-SNMP WebPro SNMP card PowerValue	PV-MBP-1-3	   
	PV11-2KBAU-RT	2000/1800								
	PV11-3KBAU-RT	3000/3000		8 x  + 1x 			PV11-3KBAU-RT-EBM (max 9)			
PowerValue Rack / Tower 6-10KVA										
	PV11-6K-RT	6000/6000	Hard Wired requires PV11-6/10-RT-TERMCOVER	2 x 	PV11-6/10-RT-RAIL-KITUPS	PV11-6/10-RT-RAIL-KITEBM	PV11-6/10K-RT-EBM minimum 1 EBM required (max 4)	One slot for any of the below: PV-RELAY-CARD AS400 relay card PowerValue PV-WINPOWER-SNMP Winpower SNMP card PowerValue CS141-BASIC CS141 Basic card CS141-ADVANCED CS141 Advance card	PV-MBP-6-10 with 2 * cable entry kits PV11-6/10-RT-TERMCOVER	   
	PV11-10K-RT	10000/10000								
PowerValue Tower 1-3KVA										
	PV11-2KBAU-T	2000/1800		4 x 			PV11-2BAU-T-EBM (max 4)	One slot for any of the below: PV-AS400-T Mini AS400 relay card (dry contacts)	PDU8HV101U	   
	PV11-3KBAU-T	3000/2700		4 x  + 1x 			PV11-3KBAU-T-EBM (max 4)		MBP3Ki	
PowerValue Tower 6-10KVA										
	PV11-6KB2-T	6000/6000	Hard Wired requires PV11-6/10-T-TERMCOVER	Terminal Block (NOT 2 x )			PV11-6/10KB2-T-EBM (max 4)	One slot for any of the below: PV-RELAY-CARD AS400 relay card PowerValue CS141-BASIC CS141 Basic card CS141-ADVANCED CS141 Advance card	6000MBS1-BFP	   
	PV11-6KS-T	6000/6000		Terminal Block (NOT 2 x )			PV11-6/10KB2-T-EBM (max 4) or external battery			
	PV11-10KB2-T	10000/10000		Terminal Block (NOT 2 x )			PV11-6/10KB2-T-EBM (max 4)			

Warranty

Model	Version	Electronic Components	Batteries	Support
PowerValue 11T G2	Tower	24 months	12 months	Return To Base Repair/Replacement
PowerValue 11RT GT	Rackmount	24 months	12 months	Return To Base Repair/Replacement
External Battery Module	Tower / Rackmount		12 months	Return To Base Repair/Replacement
PowerValue Accessories	Accessories	24 months		Return To Base Repair/Replacement

APPLICATIONS

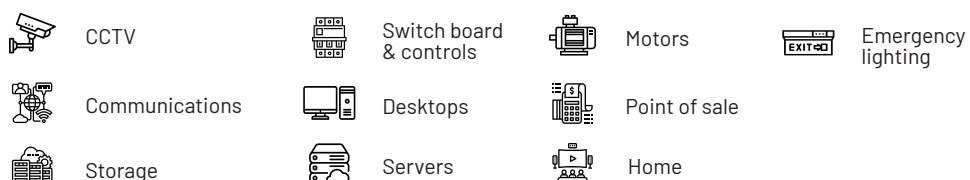

INPUT / OUTLET

